


TOP DETAIL

RUN HOME SLICKER TO WITHIN 3" OF SOFFIT OVERHANG. INSTALL A 1" x 3" BOARD IN SPACE BETWEEN TOP OF HOME SLICKER AND BOTTOM OF SOFFIT. INSTALL SIDING TO WITHIN 4" OF SOFFIT OVERHANG. INSTALL A 1" x 4" FINISH TRIM BOARD OR 4" PIECE OF SIDING OVER THE 1" x 3" BOARD. THIS WILL ALLOW FOR AIR MOVEMENT BEHIND THE CLADDING, ALLOWING CONVECTIVE DRYING AND VENTILATION TO OCCUR. APPLY SLICKER SCREEN (AS INDICATED IN BOTTOM DETAIL) TO TOP EDGE OF HOME SLICKER.

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWINGS.
3. CONTRACTORS NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.CADdetails.com/info REFERENCE NUMBER 587-014a.

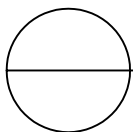

HOME SLICKER® AND HOME SLICKER® 10

TOP DETAIL